

Facestock

A white polyethylene film with a print-receptive topcoat.

Basis Weight	82 g/m ²	ISO 536
Caliper	82 µm	ISO 534

Adhesive

A general purpose permanent, acrylic based adhesive.

Liner

BG40 white, a supercalendered glassine paper.

Basis Weight	61 g/m ²	ISO 536
Caliper	54 µm	ISO 534

Laminate

Total Caliper	157 µm±10%	ISO 534
---------------	------------	---------

Performance data

Initial Tack	10 N/25mm	FTM 9 Glass
Peel Adhesion 90°	6 N/25mm	FTM 2 St.St.
Min. Application Temp.	5 °C	
Service temperature	-20°C to 80°C	

Adhesive Performance

S692N is a clear permanent adhesive featuring excellent UV resistance and weatherability together with good adhesion performance, even on apolar substrates.

Applications and use

Applications are predominantly in home and personal care. Due to its flexibility the product is especially suitable for squeezable bottles and other flexible containers.

Conversion & printing

The modified acrylic based topcoating can be printed by conventional printing techniques including flexo, screen, offset, letterpress, silkscreen, gravure, and hot or cold foiling processes. UV, water-based and solvent-based inks can be used. The topcoat is designed for optimum ink adhesion. On-press corona treatment is not advised. The face material is suitable for Thermal Transfer printing. Exact inks, foils and ribbons should be specified by your ink/foil/ribbon supplier.

Special Approvals

S692N complies with European food regulation 1935/2004/EC, with the German Recommendation (BfR) XIV and with FDA § 175.105. It also meets the demands of the limit values laid down in 10/2011/EU. In accordance with the requirements of relevant EU food regulations, the adhesive S692N may safely stand in direct contact with dry, moist and fatty foodstuffs which have a reduction factor of at least 2 according to the Commission Regulation (EU) No 10/2011, with ethanol 95% as fatty food simulant used for migration testing.


Shelf life

Two years under storage conditions as defined by FINAT (20-25°C; 40-50%RH)

AF186

Fasson®

PE85 TOP WHITE - S692N-BG40WH

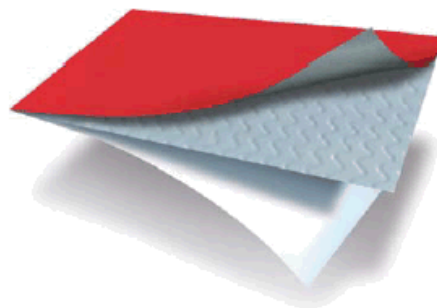

PE85 TOP WHITE



S692N



BG40WH



This is an automatically generated datasheet. All data to be considered as typical values and subject to change without prior notice. Further testing is always recommended.

If you would like to make a suggestion or comment on this datasheet, please send an email to datasheet.mgmt@eu.averydennison.com

Avery Dennison Materials Group Europe

Willem Einthovenstraat 11
2342 BH Oegstgeest
The Netherlands
+31 (0)85 000 2000



Warranty

All Avery Dennison statements, technical information and recommendations are based on tests believed to be reliable but do not constitute a guarantee or warranty. All Avery Dennison products are sold with the understanding that purchaser has independently determined the suitability of such products for its purposes.

Avery Dennison products are warranted to be free of defects in material or workmanship for a period of one year from the date of shipment. Should a defect be communicated to Avery Dennison within that time frame, Avery Dennison will evaluate and determine the existence of the defect and further decide, at its sole discretion, to either replace the defective product without charge or compensate it with a credit note in such amount as Avery Dennison deems reasonable. Avery Dennison shall have no responsibility beyond the replacement value of the defective product nor shall in any way be liable or responsible for consequential or incidental damages.

ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, OR WHETHER OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR OTHERWISE, SHALL BE EXCLUDED. NO WAIVER, ALTERATION, ADDITION OR MODIFICATION OF THE FOREGOING CONDITIONS SHALL BE VALID UNLESS MADE IN WRITING AND SIGNED BY AN EXECUTIVE OFFICER OF AVERY DENNISON.

©2013 Avery Dennison Corporation. All rights reserved. Avery Dennison and all other Avery Dennison brands, this publication, its content, product names and codes are owned by Avery Dennison Corporation. All other brands and product names are trademarks of their respective owners. This publication must not be used, copied or reproduced in whole or in part for any purposes other than marketing by Avery Dennison.